

ASSEMBLY INSTRUCTIONS

for bottom oval fenders and pur-fenders

SAFETRANSFER[®]



PERSONNEL BASKET

4 & 8 persons



SAFE TRANSFER[®]


OFFSHORE
PERSONNEL
BASKET

www.safetransfer.dk

SAFE TRANSFER® PERSONNEL BASKET FOR 4 & 8 PERSONS

Assembly instructions for bottom oval fender.

1. Mount 2 fenders with 6mm nylon rope as shown on picture, make sure the valves are pointing towards each other. Then fix the other end of the fenders.
2. Then mount the last 2 fenders, follow the same procedure as previous step.

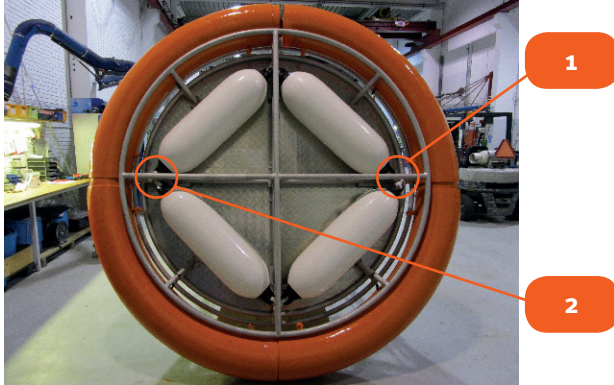

Assembly instructions for the bottom ring pur-fender.

1. Hold the first quarter on the basket.
2. Secure the fender loosely with one 380mm cable tie.
3. Place the second quarter.
4. Secure loosely with one 380mm cable tie.
5. Place the third and fourth quarters to the basket.
6. Fix the bottom lashing belt and tighten it to lift the two quarters in to place.
7. Fix the two side lashing belts, and tighten them simultaneously.
8. Then fix the top lashing belt.
9. Fix two 380mm cable ties to each four quarters
10. Cut the excess length of each cable tie- be aware of sharp ends.
11. Secure the lashing locks with two 150mm cable ties.
12. Secure the excess length of the lashing belts with two 150mm cable ties.
13. Cut off all excess length of cable ties- be aware of sharp ends
14. Refill the white fenders to have them about 1000mm at outer circle.

ITEMS TO BE USED FOR ASSEMBLING THE 4 & 8 PERSONS SAFE TRANSFER® PERSONNEL BASKET

1. 4 pcs of quarter ring fenders.
2. 4 pcs of lashing belts with locks.
3. 10 pcs of cable ties 7.6 x 380 mm.
4. 18 pcs. of cable ties 4.6 x 150 mm.
5. 1 plier (side cutter) (not included).




Assembly instructions for bottom oval fender

1.



Mount 2 fenders with 6mm nylon rope as shown on picture, make sure the valves are pointing towards each other. Then fix the other end of the fenders.

2.

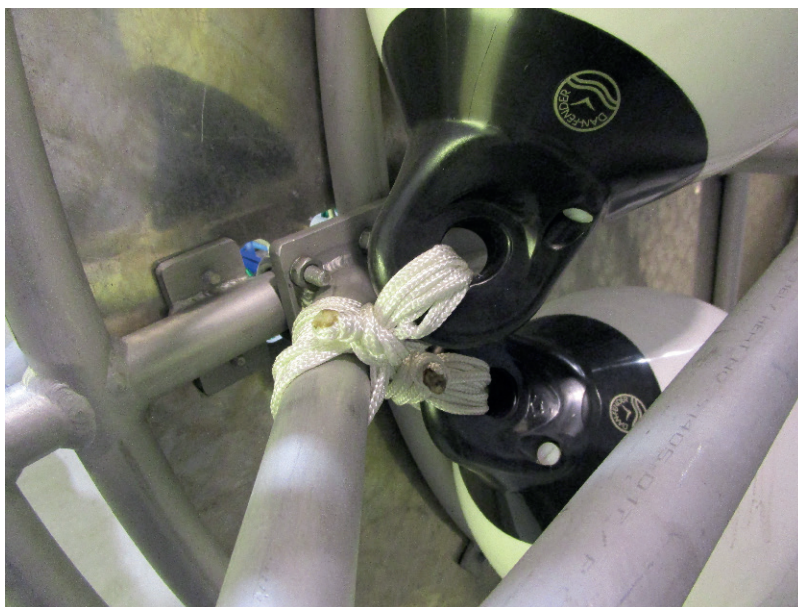


Then mount the last 2 fenders, follow the same procedure as previous step.



Assembly instructions for the bottom ring pur-fender.

1. & 2.

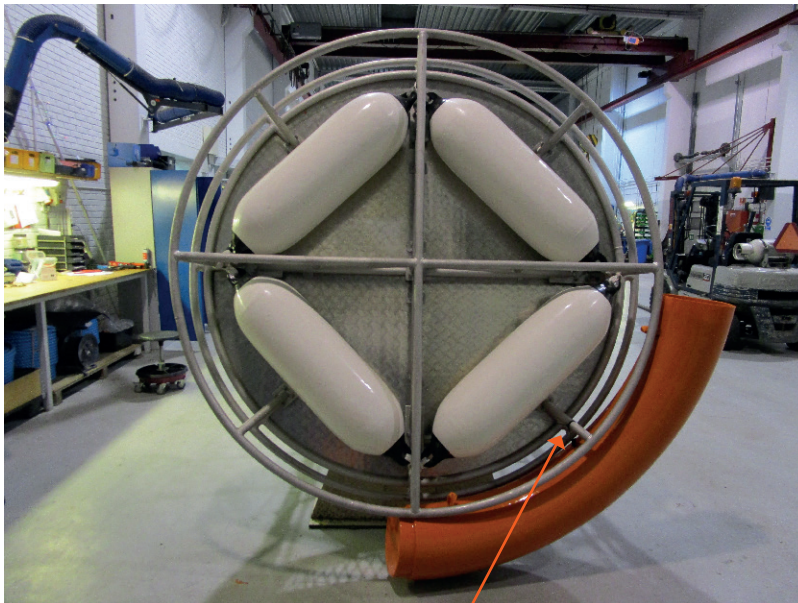

Hold the first quarter on the basket.
Secure the fender loosely with one 380mm cable tie.


3. & 4.



Place the second quarter.
Secure loosely with one 380mm cable tie.




5.

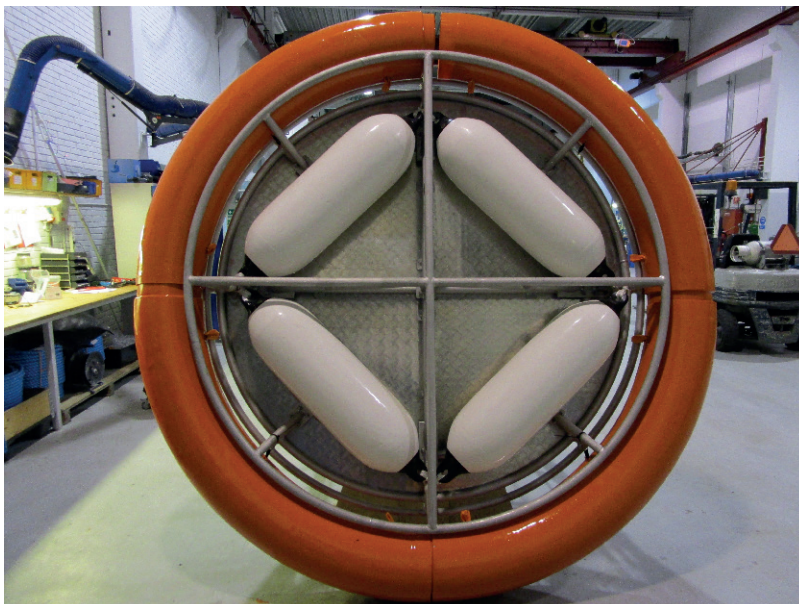

Place the third and fourth quarters to the basket.


6.

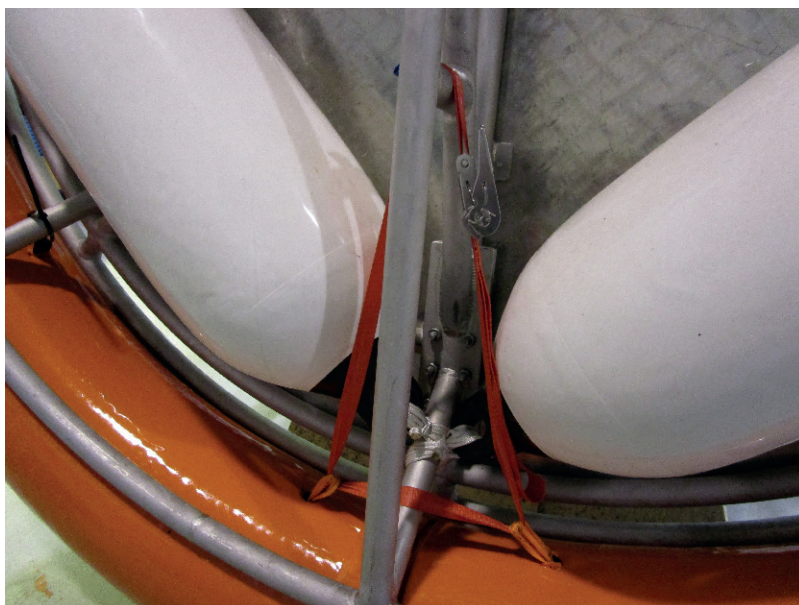

Fix the bottom lashing belt and tighten it to lift the two quarters in to place.




7. & 8.

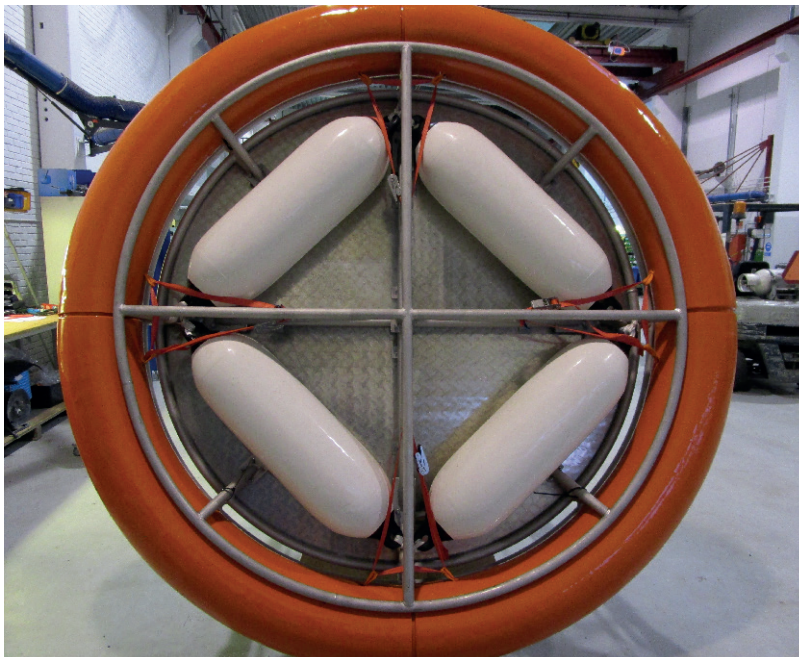

Fix the two side lashing belts, and tighten them simultaneously.
Then fix the top lashing belt.

9.

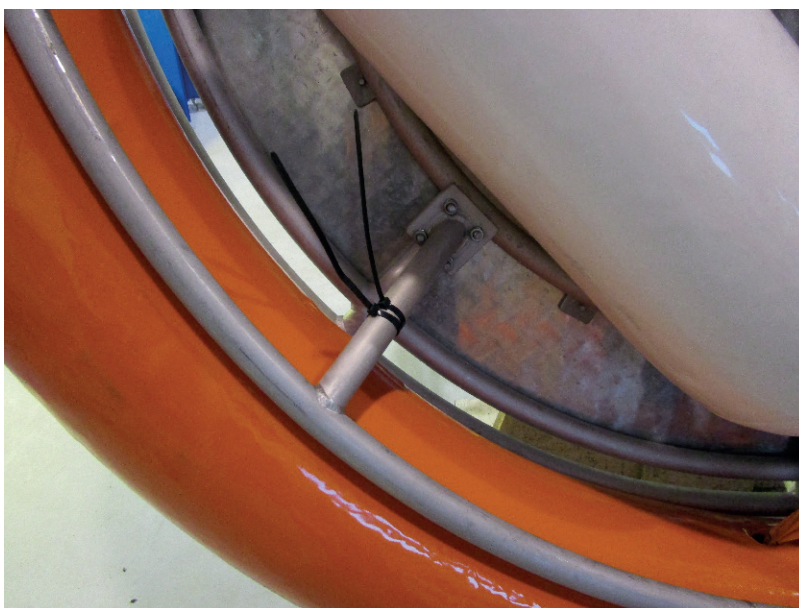

Fix two 380mm cable ties to each four quarters



10.



Cut the excess length of each cable tie- be aware of sharp ends.



11., 12. & 13.



Secure the lashing locks with two 150mm cable ties.
Secure the excess length of the lashing belts with two 150mm cable ties.
Cut off all excess length of cable ties- be aware of sharp ends



14.

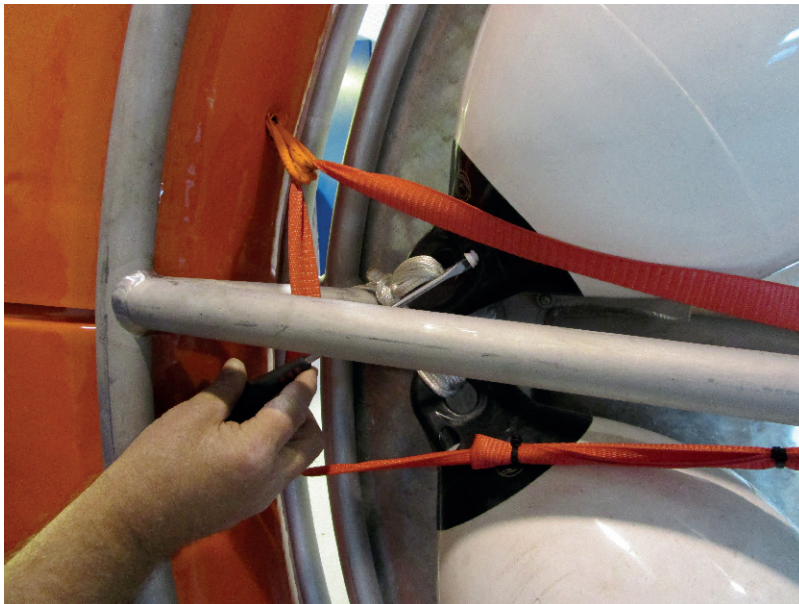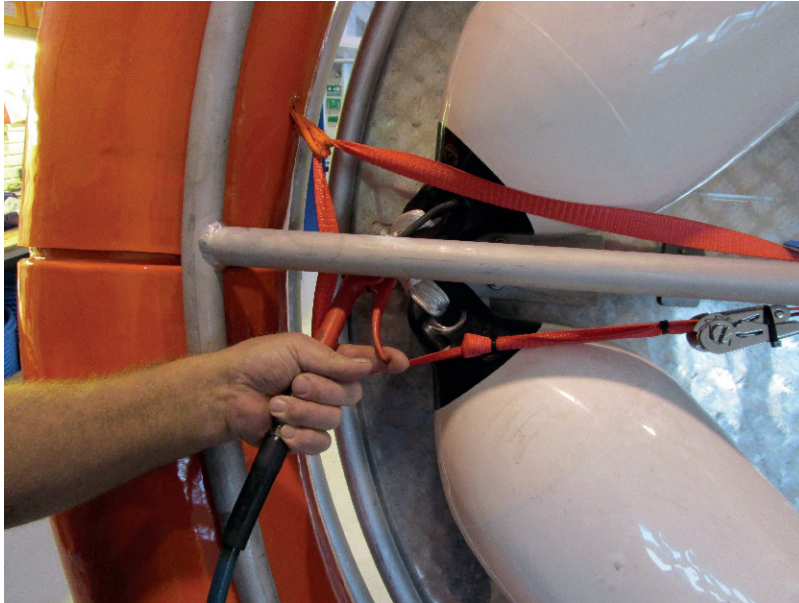

Refill the white fenders to have them about 1000mm at outer circle.

